

Inkjet Dark Transfer Paper or Blue Line, for Black and Dark Colored Fabrics. (BLUE Line)

Instructions

BLUE Line Inkjet Heat Transfer Papers are designed for ink jet printers to transfer photos and images to Dark colored T-shirts, Sweatshirts, mouse pads, puzzles and leather goods. Choose garments that have a tight weave. This is particularly important when transferring to sweatshirts. Product is suitable for home use and can be transferred with a hand iron.

ITEMS YOU WILL NEED

- Black or dark colored Cotton, Cotton/Polyester Blend fabrics and garment.
For best results use fabric with tight weave and wash the fabric before transfer is highly recommended.
- Heat Press or Iron (do not use steam)
- Pillowcase
- Parchment paper or Teflon Sheet
- Hard smooth surface (example: Formica, **DO NOT USE AN IRONING BOARD**)
- Store unused transfer papers in a re-sealable poly bag in a flat, cool, dry area.

STEP ONE – PRINTING YOUR IMAGE

1) Bring paper to room temperature before printing. Print image/design on paper. **DO NOT** mirror or flip image prior to printing.

Recommended print settings:

HP – Media: Plain Paper - **Print Mode: Normal**


Epson – Media: Plain Paper - **Print Mode: Photo**

Canon – Media: Plain Paper - **Print Mode: Standard**

Kodak – Media: T-Shirt Transfer - **Print Mode: Auto**

TEMPERATURE 193° C / 375° F
PRESSURE Medium to High
TIME 20-25 Sec.

2) Do not use any printers that have heating elements in them, such as the Hewlett-Packard 1200C. Otherwise, this product works for a variety of printers. Load the sheet into your printer so that it will print on the nonglossy (unlined) side.

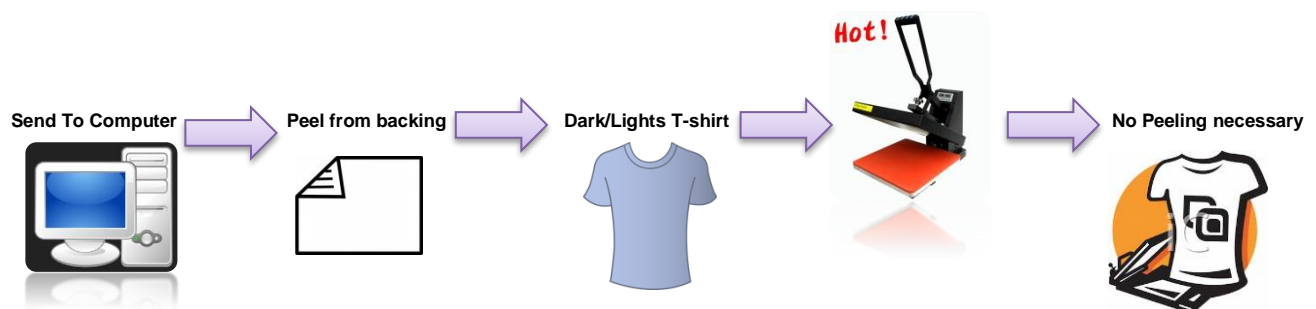

STEP TWO – TRANSFERRING YOUR IMAGE HEAT PRESS

- 1) Preheat press to 375° F.
- 2) Press garment for 3-5 seconds to release moisture and remove wrinkles.
- 3) **Peel liner from back of printed transfer.**
- 4) Place printed transfer onto the garment with the print side up and place the parchment paper on top of the printed transfer.
- 5) Set at medium to high pressure for best results.
- 6) Press for 25 seconds.
- 7) To peel COLD, wait for the transfer to cool for at least two minutes and then remove the parchment paper using a smooth, even motion. To peel HOT, **wait 5 seconds**, then remove parchment paper while still HOT/Warm using a smooth, even motion.

TRANSFERRING-USING A HOUSE-HOLD HAND IRON

- 1) Preheat iron to highest cotton setting for 5 minutes.
DO NOT USE STEAM. (Empty all water)
- 2) Use heavy pressure while ironing. Use an ironing surface that is waist level or below.
DO NOT USE AN IRONING BOARD.
- 3) Place a pillowcase on the surface and iron the pillowcase to remove wrinkles.
- 4) Place the transfer with the image side down in the center of the garment.
- 5) Hand ironing is recommended only for T-shirts and light weight fabrics.

PAPER REMOVAL (COOL PEEL)

Allow transfer to cool for approximately 60 seconds and remove paper.

WASHING INSTRUCTIONS

Turn garment inside out and wash in cold water using a mild detergent. Do not use bleach. Dry on low heat setting. Do not iron directly on the transferred area.

STORAGE AND HANDLING OF UNUSED SHEETS

Store in a cool, dry area and do not remove from carton or poly bag until you are ready to use.



Important Note:

Ink Jet Transfer Papers are designed for used ONLY in desktop inkjet printers, cannot be used in printers with heating elements to dry the ink (for example, HP 1200C). A test is always recommended to determine the suitability of this paper for your equipment and your methods.

The Seller's and Manufacturer's maximum obligation shall be replacing any paper that has been proved to be defective. Neither the seller nor the Manufacturer should be liable for any injury, direct or consequential, arising out of the use of, or inability to use, this paper.